

PROFLUSH PUMP ADAPTOR

DIRECTIONS FOR USE

Remove pump head after ensuring water is turned off both on flow and return.

Hand screw the longer thread fully into the central brass female thread on the smooth (rear) side of the plastic body. Continue thread until stopped by the collar on the cap of the thread.

Place large "O" Ring on the collar around the smooth (rear) side of the body and the smaller "O" Ring on the thread cap collar (a smear of grease will assist in keeping it in position).

With the tread pointing outwards fit the body to the key provided until resistance is felt on the "O" Ring to secure a tight seal to the pump base.

Finally screw the 3/4" nipple into place.

A selection of screw is supplied enabling most central heating pumps to be adapted.